

AR-15 EXTRACTOR SPRING - BROWNELL'S BRN AR-15 BOLT EXTRACTOR SPRING, STEEL

[Rifle Parts](#) > [Bolt Parts](#) > [Extractor Parts](#) > [Extractor Springs](#)

OEM AR-15/M16 replacement Extractor Spring.



Attributes

- Name: [BROWNELL'S BRN AR-15 BOLT EXTRACTOR SPRING, STEEL](#)
- Manufacturer: [BROWNELL'S](#)
- Product no.: 100040954
- Mfr. No.: AZ-0004
- Weapon type: AR-15
- Delivery weight: 0.005kg
- Shipping height: 3mm
- Shipping width: 76mm
- Shipping length: 152mm
- UPC: 050806029590

Item details

Made in USA

Table of Contents

- Startpage
- AR15 Extractor Spring Safety Instructions
- About Us

AR15 Extractor Spring Safety Instructions

Introduction

Thank you for choosing the AR15 Extractor Spring from BROWNELLS. This product is designed to provide reliable performance for your AR15/M16 firearm. It is essential to read and understand these safety instructions to ensure safe usage and compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure that the product is suitable for your specific firearm model before use.
- Always handle firearms with care and follow all safety protocols.
- Store the extractor spring in a secure location, out of reach of children and unauthorized users.
- Regularly inspect the extractor spring for any signs of wear or damage before installation.
- If you notice any defects or abnormalities, do not use the product and consult a qualified gunsmith.

Specific Safety Precautions for Use

- Only use the extractor spring in conjunction with compatible AR15/M16 bolt assemblies.
- Avoid using excessive force during installation to prevent damage to the spring or the firearm.
- Ensure that all firearm components are clean and free from debris before installation.
- Follow all local laws and regulations regarding the modification and use of firearms.
- Keep your firearm pointed in a safe direction at all times during installation and handling.

Instructions for Installation and Usage

1. Preparation:

- Ensure that the firearm is unloaded and the chamber is clear.
- Gather necessary tools, including a punch and hammer, if needed.

2. Removal of Old Extractor Spring:

- Using appropriate tools, carefully remove the old extractor spring from the bolt assembly.
- Dispose of the old spring according to local regulations.

3. Installation of New Extractor Spring:

- Align the new extractor spring with the extractor and bolt assembly.
- Gently press the spring into place, ensuring it is seated correctly.
- If necessary, use a punch to ensure the spring is fully installed without applying excessive force.

4. Final Inspection:

- Inspect the installation to ensure that the extractor spring is properly seated and functioning.
- Reassemble the bolt assembly and perform a function check to ensure proper operation.

Disposal Instructions

- Dispose of the extractor spring in accordance with local regulations regarding metal waste.
- Do not dispose of the spring in regular household waste.

Contact Information for Further Support

For any inquiries regarding safety or product performance, please contact the manufacturer or your local authorized dealer. Always ensure that you have the most current information regarding the product and its usage.

By following these safety instructions, you can ensure a safe and effective use of the AR15 Extractor Spring. Thank you for your attention to safety and compliance.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk