

AR-15 EXTRACTOR PIN - BROWNELLS BRN AR-15 BOLT EXTACTOR PIN, BLACK

[Home](#)

OEM AR-15/M16 replacement Extractor Pin.



Attributes

- Name: [BROWNELLS BRN AR-15 BOLT EXTACTOR PIN, BLACK](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 100040958
- Mfr. No.: AZT-M4-556ST016
- Weapon type: AR-15
- Delivery weight: 0.005kg
- Shipping width: 76mm
- Shipping length: 152mm
- UPC: 050806029637

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [AR15 Extractor Pin Safety Instructions](#)
- [About Us](#)

AR15 Extractor Pin Safety Instructions

Introduction

Thank you for choosing the AR15 Extractor Pin from BROWNELLS. This product is designed as a replacement part for your AR15/M16 firearm. It is important to follow the safety guidelines and instructions provided in this manual to ensure safe and effective use.

General Safety Guidelines

- Always treat your firearm as if it is loaded.
- Store the Extractor Pin and all firearm components in a secure location, out of reach of children and unauthorized users.
- Ensure that you are familiar with your firearm's operation before attempting to install or use the Extractor Pin.
- Regularly inspect your firearm and its components for wear or damage.
- Use only OEM parts and accessories to maintain safety and performance.
- Report any unsafe products or accidents to the appropriate authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Do not use the Extractor Pin if it appears damaged or defective.
- Ensure that the firearm is completely unloaded before installation or maintenance.
- Follow all local laws and regulations regarding firearm modifications and repairs.
- Keep your workspace clean and organized to prevent accidents during installation.
- Wear appropriate safety gear, such as safety glasses, when working on your firearm.

Instructions for Installation and Usage

1. Preparation

- Ensure that your firearm is unloaded and pointed in a safe direction.
- Gather necessary tools (e.g., punch tool, hammer) for installation.

2. Installation Steps

- Remove the bolt carrier group from the firearm.
- Locate the existing Extractor Pin and ensure it is accessible.
- Use a punch tool to gently push out the old Extractor Pin from the extractor.
- Align the new Extractor Pin with the extractor and carefully tap it into place using a hammer.
- Ensure that the Extractor Pin is securely in position and that the extractor functions properly.

3. PostInstallation Check

- Reassemble the bolt carrier group and reinstall it into the firearm.
- Conduct a function check to ensure that the extractor operates correctly.
- Store the firearm safely after confirming proper operation.

Disposal Instructions

- Dispose of any old or damaged Extractor Pins in accordance with local regulations.
- Do not dispose of the Extractor Pin in regular household waste.
- Contact local waste management authorities for guidance on proper disposal methods.

Contact Information for Further Support

For any inquiries or concerns regarding the AR15 Extractor Pin, please reach out to the designated contact point provided with your purchase or through the retailer.

By following these safety instructions, you can help ensure a safe and effective experience with your AR15 Extractor Pin. Thank you for your attention to safety and responsible firearm ownership.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk