

# **SPORTSTER DELUXE RANGE BAG BLACK**

[Shooting Accessories](#) > [Range Gear](#) > [Range Bags](#)

Constructed of tight-weave, heavyweight 600 denier polyester with thick PVC laminate for stability, this bag features a main internal pocket with dual-slider opening for easy access to contents.



## **Attributes**

- Name: [SPORTSTER DELUXE RANGE BAG BLACK](#)
- Manufacturer: [BLACKHAWK](#)
- Product no.: 100047302
- Mfr. No.: 74RB01BK
- Color: Black
- Material: Polyester
- Style: Range Bag
- Delivery weight: 1.737kg
- Shipping height: 178mm
- Shipping width: 305mm
- Shipping length: 381mm
- UPC: 648018126222

# Table of Contents

- Startpage
- SPORTSTER DELUXE RANGE BAG Safety Instructions
- About Us

# SPORTSTER DELUXE RANGE BAG Safety Instructions

## Introduction

Thank you for choosing the SPORTSTER DELUXE RANGE BAG. This guide provides essential safety instructions and guidelines to ensure the safe use of your range bag. Please read this document carefully to understand how to use and care for your bag effectively.

## General Safety Guidelines

- Always inspect the bag before use for any signs of damage or wear.
- Ensure that all zippers and closures function properly before loading the bag.
- Avoid overloading the bag to prevent strain on seams and zippers.
- Keep the bag away from sharp objects that may cause punctures or tears.
- Store the bag in a cool, dry place away from direct sunlight to prevent material degradation.
- Regularly clean the bag according to the care instructions to maintain its integrity.

## Specific Safety Precautions for Use

- **Use by Children:** This bag is not intended for use by children under the age of 12 without adult supervision.
- **Heavy Loads:** When carrying heavy items, use both shoulder straps to distribute weight evenly.
- **Moisture Exposure:** Avoid exposing the bag to excessive moisture. If the bag becomes wet, allow it to air dry completely before storing.
- **Chemical Exposure:** Do not expose the bag to harsh chemicals or solvents, as these may damage the material.
- **Fire Hazard:** Keep the bag away from open flames or high heat sources.

## Instructions for Installation and Usage

### 1. Unpacking the Bag:

- Carefully remove the bag from its packaging.
- Check for any packing materials or tags that need to be removed before use.

### 2. Loading the Bag:

- Open the main internal pocket using the dualslider opening for easy access.
- Load items evenly within the bag, avoiding overloading any one side.
- Ensure that all items are securely placed to prevent movement during transport.

### 3. Using the Straps:

- Adjust the shoulder straps to fit comfortably on your shoulders.
- Ensure that the straps are not twisted and are securely attached to the bag.

### 4. Closing the Bag:

- Once loaded, securely close all zippers and pockets to keep contents safe.
- Doublecheck that all closures are fastened before moving the bag.

## **Disposal Instructions**

- When the bag reaches the end of its usable life, dispose of it responsibly.
- Consider recycling the polyester material if local facilities allow.
- Check with local waste management authorities for proper disposal methods for synthetic materials.

## **Contact Information for Further Support**

For any questions or concerns regarding the safety and use of your SPORTSTER DELUXE RANGE BAG, please reach out to the manufacturer or your local distributor for assistance.

Thank you for your attention to these safety instructions. We hope you enjoy using your SPORTSTER DELUXE RANGE BAG safely and responsibly.

# **About Us**

## **Brownells Switzerland**

**Brownells Switzerland**

[www.brownells.ch](http://www.brownells.ch)