


WORLD OF TARGETS GALLERY RESETTING TARGET-RIMFIRE

[Shooting Accessories](#) > [Targets & Accessories](#) > [Paper Targets](#)

The Gallery Resetting Target lets you experience all the fun of knocking down targets without walking downrange or pulling cords to reset them. Hit all four of the hanging targets with your .22 caliber rimfire. Then shoot at the resetting target and all four targets drop back down for another round of shooting fun. This rugged target is designed especially for your .22 rimfire. The solid steel target is durable yet portable. Just set it on the ground and start shooting. Features twist designed paddles with no welds to break. A lot of fun!

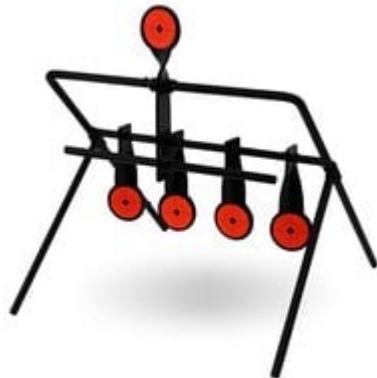

Attributes

- Name: [WORLD OF TARGETS GALLERY RESETTING TARGET-RIMFIRE](#)
- Manufacturer: [BIRCHWOOD CASEY](#)
- Product no.: 250201681
- Mfr. No.: BC-47022
- Type: Papers
- Delivery weight: 3.509kg
- Shipping height: 38mm
- Shipping width: 406mm
- Shipping length: 559mm
- UPC: 029057470222

Table of Contents

- Startpage
- World of Targets Gallery Resetting TargetRimfire Safety Instructions
- About Us

World of Targets Gallery Resetting TargetRimfire Safety Instructions

Introduction

Thank you for choosing the World of Targets Gallery Resetting TargetRimfire. This product is designed to provide you with a fun and engaging shooting experience while ensuring safety during use. Please read this safety instruction guide carefully to understand how to use the target correctly and safely.

General Safety Guidelines

- Always treat every firearm as if it is loaded.
- Ensure that you are in a safe shooting environment, away from people and property.
- Use only .22 caliber rimfire ammunition with this target.
- Wear appropriate eye and ear protection while shooting.
- Keep the target area clear of unauthorized individuals and pets.
- Regularly inspect the target for damage before use. Do not use if damaged.
- Follow all local laws and regulations regarding shooting and firearm use.

Specific Safety Precautions for Use

- Ensure that the target is placed on a stable and flat surface to prevent tipping.
- Do not shoot at the target from a distance less than the manufacturer's recommended distance.
- Avoid using the target in wet or icy conditions to prevent slipping.
- Do not attempt to reset the targets manually while the firearm is loaded.
- Always ensure that the firearm is pointed in a safe direction when loading or unloading.

Instructions for Installation and Usage

1. Setup Instructions:

- Place the target on a flat, stable surface, ensuring it is secure.
- Ensure the target is positioned at a safe shooting distance, as per your shooting range guidelines.

2. Usage Instructions:

- Load your .22 caliber rimfire firearm according to the manufacturer's instructions.
- Aim carefully at the hanging targets and shoot.
- After hitting all four hanging targets, aim at the resetting target to drop all four targets back down.
- Repeat the process as desired, ensuring safety protocols are followed.

3. PostUse Instructions:

- After your shooting session, clear the area of any spent ammunition and debris.
- Inspect the target for any damage before storing it.

Disposal Instructions

- Dispose of the target in accordance with local regulations.
- If the target is damaged beyond repair, ensure it is disposed of in a manner that prevents any risk of injury to others.
- Recycle materials where applicable, following local recycling guidelines.

Contact Information for Further Support

For any inquiries related to safety or product performance, please refer to the contact information provided with your product packaging or visit the manufacturer's website.

Thank you for prioritizing safety and enjoyment while using the World of Targets Gallery Resetting TargetRimfire. Happy shooting!

About Us

Brownells Switzerland

Brownells Switzerland

www.brownells.ch