

BRASS 30-30 WINCHESTER LEVER ACTION RIFLE - BRASS 30-30 WINCHESTER 20" BBL 5 ROUND LEVER ACTION RIFLE

[Firearms](#) > [Rifles](#) > [Lever Action](#)

From the Northwoods to the Texas hill country and in every deer camp and lodge in between, the .30-30 rifle remains the perennial choice of whitetail hunters. More than just another deer cartridge, the venerable .30-30 has been the king of deer calibers since the first rifle chambered in this ageless round was produced in 1894. In fact, it's a safe bet that in the past century, no other round has put more antlers on the wall and venison in the freezer than the .30-30. Like every Henry rifle, it's 100% American made, with its straight-grip American walnut stock and forearm, it is a masterpiece of finely crafted gunsmithing. The H009B has a visually impressive 20" octagon barrel and a handsome brass receiver that is drilled and tapped for easy scope mounting, and a brass barrel band. The magazine holds five rounds that chamber quickly and smoothly thanks to our crisp, perfectly machined action. If you're a deer hunter who wants to carry a rifle like dad and grandpa did back in the "good ol' days," treat yourself to a Henry .30-30 and relive the golden era of deer hunting while starting a few new traditions of your own.



Attributes

- Name: [BRASS 30-30 WINCHESTER 20" BBL 5 ROUND LEVER ACTION RIFLE](#)
- Manufacturer: [HENRY REPEATING ARMS](#)
- Product no.: 430105718
- Mfr. No.: H009BG
- Action Type: Lever Action
- Barrel Length: 20"
- Capacity: 5-Round
- Cartridge: 30-30 Winchester
- Finish: Brass
- Front Sight: Bead
- Length: 39"
- Magazine Included: 1 x 5-Round
- Magazine Type: Tubular
- Make: Henry
- Model: Brass
- Muzzle: Non-Threaded
- Rear Sight: Adjustable
- Stock Material: Walnut
- Weight: 8.3 lbs
- Delivery weight: 4.128kg
- Shipping height: 51mm
- Shipping width: 165mm
- Shipping length: 1,016mm
- UPC: 619835090171

Item details

Made in USA

US export classification: 0A501.a

Table of Contents

- Startpage
- Safety Instruction Guide for BRASS 3030 Winchester Lever Action Rifle
- About Us

Safety Instruction Guide for BRASS 3030 Winchester Lever Action Rifle

Introduction

Thank you for choosing the BRASS 3030 Winchester Lever Action Rifle. This guide provides essential safety instructions to ensure the safe and responsible use of your rifle. Please read and understand these guidelines before using your firearm.

General Safety Guidelines

- Always treat every firearm as if it is loaded.
- Never point a firearm at anything you do not intend to shoot.
- Keep your finger off the trigger until you are ready to shoot.
- Always be aware of your surroundings and what is beyond your target.
- Store firearms securely to prevent unauthorized access, especially from children.
- Use only the correct ammunition specified for your rifle.
- Wear appropriate eye and ear protection when shooting.
- Familiarize yourself with the operation and safety features of your rifle.

Specific Safety Precautions for Use

- Ensure the rifle is unloaded before cleaning, storing, or transporting.
- Do not use your rifle if it has been dropped or damaged until it has been inspected by a qualified gunsmith.
- Avoid using the rifle in wet or damp conditions unless specifically designed for such use.
- Use the rifle only in areas designated for shooting, complying with local laws and regulations.
- Be cautious of others around you while handling your rifle; maintain a safe distance.
- Do not alter or modify your rifle in any way that could affect its performance or safety.
- If you experience misfires or jams, follow the manufacturer's instructions for clearing them safely.

Instructions for Installation and Usage

1. Loading the Rifle:

- Ensure the rifle is pointed in a safe direction.
- Open the action and visually inspect the chamber to confirm it is empty.
- Load ammunition into the magazine tube according to the manufacturer's instructions.
- Close the action and ensure it is securely locked.

2. Sighting the Rifle:

- Adjust the rear sight for elevation and windage as needed.
- Use the bead front sight for aiming at your target.
- Practice at a safe shooting range to become familiar with your rifle's accuracy.

3. Firing the Rifle:

- Assume a stable shooting position, ensuring a firm grip on the rifle.
- Align the sights with your target.
- Squeeze the trigger gently to fire the rifle, avoiding any jerking motion.

4. Unloading the Rifle:

- After firing, open the action and remove any remaining cartridges from the magazine and chamber.
- Visually check to ensure the rifle is completely unloaded.

Disposal Instructions

- Dispose of any unused ammunition and firearm components in accordance with local laws and regulations.
- Do not throw firearms or ammunition in regular trash; contact local authorities for proper disposal methods.
- If the rifle is no longer in use, consider turning it in to a licensed firearms dealer or local law enforcement for safe disposal.

Contact Information for Further Support

For any questions or concerns regarding the safety and use of your BRASS 3030 Winchester Lever Action Rifle, please refer to the manufacturer's website or contact their customer service for assistance.

By following these guidelines, you can ensure a safe and enjoyable experience with your BRASS 3030 Winchester Lever Action Rifle. Always prioritize safety and responsibility when handling firearms.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at