

BRN-4® FIRING PIN SPRING - BROWNELLS BRN-4 FIRING PIN SPRING

[Rifle Parts](#) > [Bolt Parts](#) > [Firing Pin Parts](#) > [Firing Pin Springs](#)

Replacement or spare part for the BRN-4® Bolt Carrier Group. Handy to have on-hand for a backup parts kit. Only fits Brownells BRN-4® Bolt Carrier Group.



Attributes

- Name: [BROWNELLS BRN-4 FIRING PIN SPRING](#)
- Manufacturer: [BROWNELLS](#)
- Product no.: 430106984
- Mfr. No.: AZ-0122
- Model: BRN-4
- Weapon type: Brownells
- Delivery weight: 0.005kg
- Shipping height: 13mm
- Shipping width: 13mm
- Shipping length: 38mm
- UPC: 050806000759

Item details

Made in USA

Table of Contents

- Startpage
- BRN4® Firing Pin Spring Safety Instructions
- About Us

BRN4® Firing Pin Spring Safety Instructions

Introduction

Thank you for choosing the BRN4® Firing Pin Spring. This guide provides essential safety instructions and usage information to ensure the safe operation and maintenance of your product. Please read this guide carefully before using the BRN4® Firing Pin Spring.

General Safety Guidelines

- Ensure that the BRN4® Firing Pin Spring is used only with the Brownells BRN4® Bolt Carrier Group.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the firing pin spring for wear and damage before use.
- Do not use the firing pin spring if it shows signs of degradation or malfunction.
- Report any unsafe conditions or product failures to the appropriate authorities.

Specific Safety Precautions for Use

- Always wear appropriate protective gear, including safety glasses, when handling firearms.
- Ensure that the firearm is unloaded before performing any maintenance or installation.
- Follow all local laws and regulations regarding the use and modification of firearms.
- Be aware of your surroundings and ensure that you are in a safe environment when using firearms.
- Do not attempt to modify the firing pin spring or its components.

Instructions for Installation and Usage

1. Preparation

- Ensure that you have the necessary tools for installation, including a punch tool and a hammer.
- Verify that the firearm is unloaded and the Bolt Carrier Group is removed from the firearm.

2. Installation

- Locate the firing pin assembly within the BRN4® Bolt Carrier Group.
- Remove the old firing pin spring if applicable, using the punch tool to carefully push out the retaining pin.
- Insert the new BRN4® Firing Pin Spring into the firing pin assembly, ensuring it is seated properly.
- Reinsert the retaining pin to secure the firing pin spring in place.

3. Usage

- Once installed, reassemble the Bolt Carrier Group and test the firearm in a safe environment.
- Conduct a function check to ensure that the firing pin operates correctly.

Disposal Instructions

- Dispose of the BRN4® Firing Pin Spring in accordance with local regulations regarding firearm parts and materials.
- Do not dispose of the product in household waste. Instead, utilize designated disposal facilities for hazardous materials if applicable.

Contact Information for Further Support

For any inquiries or concerns regarding the BRN4® Firing Pin Spring, please refer to the manufacturer's website or customer service for assistance. Ensure that you provide all relevant details regarding your product and any issues encountered.

Please remember that safety is your responsibility. By following these guidelines, you can ensure a safe and effective experience with your BRN4® Firing Pin Spring. Thank you for your attention to safety and compliance.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk