

CLUB SERIES DIVIDED SHELL POUCH WITH BELT GREEN

BOB ALLEN CLUB SERIES DIVIDED SHELL POUCH WITH BELT FEATURES:
Durable, Light-Weight Ripstop Nylon Construction Dual Shotgun Shell Box
Compartments Heavy-duty 2" Adjustable Web Belt Web Belt Adjustable from
26"-50"



Attributes

- Name: CLUB SERIES DIVIDED SHELL POUCH WITH BELT GREEN
- Manufacturer: BOB ALLEN
- Product no.: 430113155
- Mfr. No.: 22171
- Color: Green
- Material: Nylon
- UPC: 617867122334

Table of Contents

- [Startpage](#)
- [English: Safety Instruction Guide for CLUB SERIES DIVIDED SHELL POUCH WITH BELT](#)

Safety Instruction Guide for CLUB SERIES DIVIDED SHELL POUCH WITH BELT

Introduction

Thank you for choosing the BOB ALLEN CLUB SERIES DIVIDED SHELL POUCH WITH BELT. This product is designed to provide a convenient and safe way to carry shotgun shells while ensuring comfort during use. Please read this safety instruction guide carefully to understand how to use and maintain the pouch safely.

General Safety Guidelines

- Ensure that the pouch is used only for its intended purpose.
- Regularly inspect the pouch for any signs of wear or damage before each use.
- Keep the pouch out of reach of children when not in use.
- Follow all local laws and regulations regarding the carrying of ammunition.
- If you notice any defects or safety concerns, discontinue use immediately and report them to the appropriate authorities.

Specific Safety Precautions for Use

- Always ensure that the shotgun shells are stored securely in the designated compartments to prevent accidental discharge.
- Do not overload the pouch beyond its intended capacity.
- When wearing the pouch, ensure that the belt is adjusted properly to avoid slippage or discomfort.
- Avoid exposing the pouch to extreme temperatures or harsh chemicals, as this may compromise the material integrity.
- If using the pouch while engaging in outdoor activities, be aware of your surroundings to prevent accidents.

Instructions for Installation and Usage

Installation

1. Adjusting the Belt:

- Unbuckle the belt and lay it flat.
- Slide the belt through the designated loops on the pouch.
- Adjust the belt length by pulling on the webbing until it fits comfortably around your waist.
- Secure the belt by buckling it and ensure it is tight enough to prevent movement but not so tight as to cause discomfort.

Usage

1. Loading the Pouch:

- Open the compartments of the pouch.
- Place the shotgun shells in their respective compartments, ensuring they are seated properly.
- Close the compartments securely to prevent shells from falling out during use.

2. Wearing the Pouch:

- Once the pouch is loaded, place it around your waist.
- Adjust the belt as necessary to ensure a snug fit.
- Ensure that the pouch is positioned comfortably and does not obstruct movement.

3. Removing the Pouch:

- To remove the pouch, unbuckle the belt and carefully lift the pouch off your waist.
- Store the pouch in a dry, cool place when not in use.

Disposal Instructions

- Dispose of the pouch responsibly at a designated waste disposal facility.
- If the pouch is no longer usable, consider recycling the materials if possible.
- Do not dispose of the pouch in regular household waste if it contains any remnants of ammunition.

Contact Information for Further Support

For any inquiries or concerns regarding the use and safety of the CLUB SERIES DIVIDED SHELL POUCH WITH BELT, please refer to the product packaging or visit the manufacturer's website for further assistance.

Thank you for prioritizing safety while using the BOB ALLEN CLUB SERIES DIVIDED SHELL POUCH WITH BELT. Your adherence to these guidelines helps ensure a safe and enjoyable experience.