


DIRTY BIRD LUCKY SHOT BOTTLES 12 X 18" TARGET - BIRCHWOOD CASEY DIRTY BIRD LUCKY SHOT BOTTLES 12 X 18" TARGET 6 PACK

BIRCHWOOD CASEY DIRTY BIRD LUCKY SHOT BOTTLES 12 X 18" TARGET

FEATURES: Spot your shots easily? Intense splatter offers superior downrange contrast? Great targets for all types of pistol-action shooting? Heavy tagboard construction 12" x 18"? 6 Pack

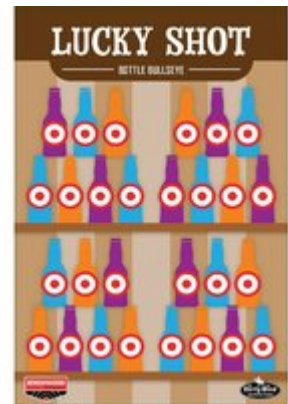

Attributes

- Name: BIRCHWOOD CASEY DIRTY BIRD LUCKY SHOT BOTTLES 12 X 18" TARGET 6 PACK
- Manufacturer: BIRCHWOOD CASEY
- Product no.: 430114041
- Mfr. No.: BC-35772
- Style: Bullseye
- Target Size/Type: Large 12 to 20
- Type: Papers
- Quantity: 6
- Delivery weight: 1.937kg
- Shipping height: 317mm
- Shipping width: 463mm
- Shipping length: 30mm
- UPC: 888151076545

Table of Contents

- [Startpage](#)
- [English: Safety Instruction Guide for DIRTY BIRD LUCKY SHOT BOTTLES](#)

Safety Instruction Guide for DIRTY BIRD LUCKY SHOT BOTTLES

Introduction

Thank you for choosing the DIRTY BIRD LUCKY SHOT BOTTLES. This product is designed for safe and enjoyable shooting practice. To ensure your safety and the safety of others, please read this guide carefully. It provides essential information regarding the safe use, handling, and disposal of the product in compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Always ensure that you are in a safe environment when using the DIRTY BIRD LUCKY SHOT BOTTLES.
- Use the product only as intended, following the instructions provided.
- Keep the product out of reach of children and vulnerable individuals.
- Always wear appropriate eye and ear protection while shooting.
- Report any unsafe products or accidents to the relevant authorities.
- Regularly check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Ensure that the target is set up in a safe location, away from bystanders and flammable materials.
- Use the targets only with suitable firearms and ammunition as specified by the manufacturer.
- Do not use the targets if they are damaged or have been previously shot at in a manner that compromises their integrity.
- Ensure that the shooting area is clear of obstacles and that a proper backstop is in place.
- Avoid shooting at the targets in adverse weather conditions, such as high winds or rain.

Instructions for Installation and Usage

1. Setting Up the Target:

- Choose a flat, stable surface to set up your target.
- Ensure that the target is securely positioned to prevent it from falling during use.
- If using a stand, ensure it is sturdy and can support the weight of the target.

2. Using the Target:

- Stand at a safe distance from the target, as recommended for your specific firearm type.
- Aim carefully and take your time to ensure accuracy.
- After shooting, assess the target for damage and replace it if necessary.

3. PostUse Procedures:

- Once you have finished shooting, safely store your firearm and ammunition.
- Remove the target from the shooting area and dispose of it properly.

Disposal Instructions

- Dispose of used or damaged targets in accordance with local waste disposal regulations.
- Do not burn the targets as they may contain materials that could release harmful substances when incinerated.
- Always check with local authorities for specific disposal guidelines related to shooting targets.

Contact Information for Further Support

For any questions or concerns regarding the DIRTY BIRD LUCKY SHOT BOTTLES, please refer to the product packaging or the manufacturer's website for additional information and support.

Thank you for prioritizing safety while enjoying your shooting experience.