


DIRTY BIRD TROPHY ROOM 12 X 18" TARGETS - BIRCHWOOD CASEY TROPHY ROOM 12 X 18" DIRTY BIRD TARGETS 6 PACK

BIRCHWOOD CASEY DIRTY BIRD TROPHY ROOM 12 X 18" TARGETS 6 PACK

FEATURES: Spot your shots easily? Intense splatter offers superior downrange contrast? Great targets for all types of pistol-action shooting? Heavy tagboard construction 12" x 18"? 6 Pack

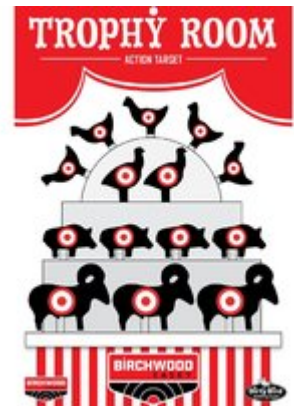

Attributes

- Name: BIRCHWOOD CASEY TROPHY ROOM 12 X 18" DIRTY BIRD TARGETS 6 PACK
- Manufacturer: BIRCHWOOD CASEY
- Product no.: 430114044
- Mfr. No.: BC-35775
- Style: Bullseye
- Target Size/Type: Large 12 to 20
- Type: Papers
- Quantity: 6
- Delivery weight: 1.937kg
- Shipping height: 317mm
- Shipping width: 463mm
- Shipping length: 30mm
- UPC: 888151076576

Table of Contents

- [Startpage](#)
- [English: Safety Instruction Guide for DIRTY BIRD TROPHY ROOM 12 X 18" TARGETS](#)

Safety Instruction Guide for DIRTY BIRD TROPHY ROOM 12 X 18" TARGETS

Introduction

Thank you for choosing the DIRTY BIRD TROPHY ROOM 12 X 18" TARGETS by Birchwood Casey. This guide provides essential safety instructions and guidelines to ensure safe and effective use of the product. Please read this document carefully to understand the precautions necessary for your safety and the safety of others.

General Safety Guidelines

- Always handle targets with care to avoid any accidents or injuries.
- Ensure that the shooting area is clear of unauthorized personnel, especially children.
- Use appropriate eye and ear protection when shooting.
- Check local laws and regulations regarding target shooting before use.
- Inspect targets for any damage or defects before use.
- Store targets in a cool, dry place, away from direct sunlight and moisture.

Specific Safety Precautions for Use

- Ensure that the target is securely mounted to prevent it from falling or being blown away.
- Always aim firearms in a safe direction and ensure the area beyond the target is clear.
- Do not use targets that show signs of severe wear or damage.
- Avoid using targets in high winds or adverse weather conditions.
- Use only designated shooting ranges or safe areas for target practice.
- Do not retrieve or handle spent ammunition until the shooting area is declared safe.

Instructions for Installation and Usage

1. Installation:

- Choose a suitable location for mounting the target, ensuring it is at a safe distance from people and property.
- Use a sturdy backing to mount the target securely, such as a wooden frame or a designated target stand.
- Ensure the target is positioned at eye level for best visibility.

2. Usage:

- Before shooting, confirm that the target is properly secured and visible.
- Load your firearm only when you are ready to shoot.
- Follow all standard firearm safety rules while shooting.
- After shooting, check the target for damage and ensure the area is clear before retrieving any spent ammunition.

Disposal Instructions

- Dispose of used targets in accordance with local waste disposal regulations.
- Do not burn targets or any packaging materials, as they may contain harmful substances.
- Recycle packaging materials where applicable.

Contact Information for Further Support

For any safety inquiries or concerns regarding the DIRTY BIRD TROPHY ROOM 12 X 18" TARGETS, please refer to the product packaging for the appropriate contact information.

Conclusion

By following these safety instructions and guidelines, you can ensure a safe and enjoyable experience while using the DIRTY BIRD TROPHY ROOM 12 X 18" TARGETS. Always prioritize safety and adhere to local laws and regulations regarding target shooting. Thank you for your attention to these important safety measures.