

GRIP PLUG for GLOCK® - Gen 4 Glock Grip Plug, No Backstrap, 20, 21, 41

[Handgun Parts](#) > [Grip Parts](#) > [Grip Plugs](#)

Keeps Dirt Out of Grip Frame

Snaps into the opening at the rear of the Glock® grip frame for a cleaner appearance, plus keeps dust, dirt, snow and water out of the gun. Creates a perfect location for adding extra weight to competition guns or to counter recoil on light, carry guns. Easily removed, does not alter gun. See specs for proper fit to your model of Glock.



Attributes

- Name: [Gen 4 Glock Grip Plug, No Backstrap, 20, 21, 41](#)
- Manufacturer: [JENTRA](#)
- Product no.: 463000013
- Mfr. No.: JP7
- Make: Glock
- Model: 20,21,41
- Delivery weight: 0.005kg
- Shipping height: 6mm
- Shipping width: 51mm
- Shipping length: 102mm
- UPC: 820103357364

Item details

Made in USA

Table of Contents

- Startpage
- GRIP PLUG for GLOCK® Gen 4 Safety Instruction Guide
- About Us

GRIP PLUG for GLOCK® Gen 4 Safety Instruction Guide

Introduction

Thank you for choosing the GRIP PLUG for GLOCK® Gen 4. This product is designed to enhance the performance and appearance of your Glock firearm. Please read this safety instruction guide carefully to ensure safe and proper use of the product.

General Safety Guidelines

- Ensure that the firearm is unloaded before installing or removing the grip plug.
- Always handle firearms with care and follow all safety protocols.
- Keep the grip plug and all firearm accessories out of reach of children.
- Regularly inspect the grip plug for any signs of wear or damage.
- If you notice any issues, discontinue use immediately and consult a qualified gunsmith.

Specific Safety Precautions for Use

- Do not use the grip plug if it appears damaged or does not fit securely in the grip frame.
- Avoid exposing the grip plug to extreme temperatures or harsh chemicals.
- Ensure that the grip plug is properly seated before using the firearm.
- Be aware that adding weight to the grip may alter the balance and handling of the firearm.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools if required for installation.

2. Installation:

- Locate the opening at the rear of the Glock® grip frame.
- Align the grip plug with the opening and gently press it into place until it snaps securely.
- Verify that the grip plug is seated properly and does not move when pulled.

3. Usage:

- Use the firearm as intended, ensuring that the grip plug remains secure during operation.
- Monitor the grip plug periodically for any signs of wear or loosening.

4. Removal:

- To remove the grip plug, gently pull it out from the rear of the grip frame.
- Ensure that the firearm is unloaded before attempting to remove the grip plug.

Disposal Instructions

- Dispose of the grip plug in accordance with local regulations.
- Do not dispose of the grip plug in regular household waste if it is damaged or contains hazardous materials.
- Consider recycling options if available.

Contact Information for Further Support

For any inquiries regarding the GRIP PLUG for GLOCK® Gen 4, please refer to the manufacturer's contact details provided with the product packaging or visit the manufacturer's website for more information.

By following these guidelines, you can ensure a safe and enjoyable experience with your GRIP PLUG for GLOCK® Gen 4. Thank you for your attention to safety.

About Us

Brownells Switzerland

Brownells Switzerland

www.brownells.ch