P320/P250 40 SMITH & WESSON HANDGUN MAGAZINES - 13 ROUND 40/357 COMPACT MAGAZINE, BLACK

These factory replacement magazines are for Sig Sauer P250 and P320 handguns chambered in .40 S&W. Sometimes the quickest way to solve a problem with feeding or cycling is to make sure you are using only original factory magazines in your Sig Sauer P250 and P320 pistol. All Sig Sauer P250 and P320 factory replacement magazines have a hardened steel mag body with a durable satin black finish, plus a black polymer follower and removable base plate. Extended capacity P250 and P320 magazines have a longer base pad that protrudes below the grip of the pistol when seated in the magwell.



Attributes

• Name: 13 ROUND 40/357 COMPACT MAGAZINE, BLACK

• Manufacturer: SIG SAUER, INC.

Product no.: 732000498Mfr. No.: MAG-MOD-C-43-13

Capacity: 13-Round

Cartridge: 357 SIG,40 S&W

Finish: BlackMake: Sig SauerMaterial: Steel

Model: P250 Compact,P320
Delivery weight: 0.091kg
Shipping height: 10mm
Shipping width: 102mm
Shipping length: 211mm
UPC: 798681505128

Item details

US export classification: 0A501.x

Table of Contents

- StartpageEnglish: Safety Instruction Guide for P320/P250 40 Smith & Description (Startpage)

Safety Instruction Guide for P320/P250 40 Smith & Samp; Wesson Handgun Magazines

Introduction

Thank you for choosing the P320/P250 40 Smith & Smith

General Safety Guidelines

- Ensure that the magazines are compatible with your Sig Sauer P250 and P320 handguns.
- Always handle magazines and firearms with care and follow all safety protocols.
- Keep magazines out of reach of children and unauthorized users.
- Regularly inspect your magazines for any signs of damage or wear.
- Store magazines in a cool, dry place away from direct sunlight and moisture.
- Report any unsafe products or accidents to local authorities immediately.
- Check for recall updates on the EU's Safety Gate platform for the latest safety information.

Specific Safety Precautions for Use

- Always ensure that your firearm is unloaded before inserting or removing a magazine.
- Do not attempt to modify or disassemble the magazine.
- Use only original factory replacement magazines with your Sig Sauer P250 and P320 handguns to avoid feeding or cycling issues.
- Avoid using magazines that show signs of damage, such as dents or cracks.
- Be aware of the magazine's capacity and do not exceed it.
- When loading the magazine, ensure that the cartridges are seated properly.
- Never point the firearm at anything you do not intend to shoot.

Instructions for Installation and Usage

1. Loading the Magazine:

- Hold the magazine with the follower facing up.
- Insert cartridges one at a time, pressing down on the follower until the cartridge is fully seated.
- Ensure that each cartridge is properly aligned and seated.

2. Inserting the Magazine into the Firearm:

- Ensure the firearm is pointed in a safe direction and is unloaded.
- Align the magazine with the magazine well of the firearm.
- Firmly push the magazine into the well until it clicks into place.

3. Removing the Magazine:

- With the firearm pointed in a safe direction, press the magazine release button.
- Grasp the magazine and pull it straight out from the magazine well.

4. Storing the Magazine:

- Store unloaded magazines in a secure location.
- Keep magazines in their original packaging or a designated storage container to prevent damage.

Disposal Instructions

- Dispose of any damaged or worn magazines in accordance with local regulations.
- Do not dispose of magazines in regular household waste.
- Contact local waste management authorities for guidelines on hazardous waste disposal if necessary.

Contact Information for Further Support

For any safety inquiries or concerns regarding your P320/P250 40 Smith & Description Handgun Magazines, please refer to the manufacturer's contact information provided with your product. Always ensure you have the latest safety updates and product information.

Thank you for prioritizing safety and for your responsible use of the P320/P250 40 Smith & Smi