

# MEC SIZEMASTER SHELL PRESS - MEC RELOADING SIZEMASTER SINGLE STAGE RELOADING PRESS 12 GAUGE

[Reloading](#) > [Reloading Presses](#) > [Shotshell Presses](#)

The MEC Sizemaster is an all-in-one, single-stage reloader that offers simplicity and efficiency without sacrificing precision. Loaded with premium features like the E-Z Prime automatic primer feed and "Power Ring" collet resizer that returns every base to factory specifications. The new generation resizing station handles brass or steel heads, both high and low base. Adjustable for 3 shells, and available in 12, 20, 28 gauge and .410 bore (.410 not available with automatic primer feed). Includes 1 Charge Bar and 3 Powder Bushings.



## Attributes

- Name: [MEC RELOADING SIZEMASTER SINGLE STAGE RELOADING PRESS 12 GAUGE](#)
- Manufacturer: [MEC RELOADING](#)
- Product no.: 749010672
- Mfr. No.: 812012
- Gauge: 12 Gauge
- Delivery weight: 9.045kg
- Shipping height: 572mm
- Shipping width: 425mm
- Shipping length: 572mm
- UPC: 098489013741

## Item details

Made in USA

# Table of Contents

- Startpage
- MEC Sizemaster Shell Press Safety Instruction Guide
- About Us

# MEC Sizemaster Shell Press Safety Instruction Guide

## Introduction

Thank you for choosing the MEC Sizemaster Shell Press. This guide provides essential safety instructions to ensure safe and effective use of your reloading press. Please read these instructions carefully to understand how to operate the product safely and efficiently.

## General Safety Guidelines

- Always read and understand the user manual before using the MEC Sizemaster Shell Press.
- Ensure that the workspace is clean, welllit, and free from distractions.
- Keep the press out of reach of children and vulnerable individuals.
- Use the press only for its intended purpose: reloading shotgun shells.
- Wear appropriate safety gear, including safety glasses and gloves, while using the press.
- Regularly inspect the press for any signs of wear or damage before use.
- Report any unsafe conditions or accidents to the appropriate authorities.

## Specific Safety Precautions for Use

- Ensure that the press is securely mounted to a stable workbench before use.
- Do not overload the press beyond its specified capacity.
- Use only compatible components, such as shells, primers, and powder, as recommended by the manufacturer.
- Avoid using the press in damp or wet conditions to prevent electrical hazards.
- Keep hands and clothing clear of moving parts during operation.
- Do not attempt to modify the press or use it for purposes other than reloading.
- If you experience any unusual noises or resistance during operation, stop using the press immediately and inspect for issues.

## Instructions for Installation and Usage

### 1. Installation

- Choose a sturdy and stable workbench for mounting the press.
- Use bolts and hardware provided to securely attach the press to the workbench.
- Ensure that the press is level and firmly in place before proceeding.

### 2. Setup

- Install the EZ Prime automatic primer feed according to the manufacturer's instructions.
- Select the appropriate Charge Bar and Powder Bushing for the desired load.
- Adjust the resizing station to accommodate the type of shell being reloaded (brass or steel heads).

### 3. Usage

- Follow these steps for reloading:
  1. Insert a shell into the resizing station.
  2. Operate the handle to resize the shell.
  3. Use the EZ Prime automatic primer feed to place a primer into the shell.
  4. Measure and dispense the appropriate amount of powder using the Charge Bar.
  5. Insert a wad and shot as per your reloading recipe.

6. Crimp the shell securely to complete the reloading process.
  - Always keep the workspace organized and free from clutter during operation.

## Disposal Instructions

- Dispose of any unused or expired components, such as primers or powders, in accordance with local regulations.
- Do not dispose of hazardous materials in regular trash. Contact local waste management authorities for proper disposal methods.
- Recycle any metal or plastic components whenever possible.

## Contact Information for Further Support

For any inquiries regarding safety, usage, or product support, please reach out to your local MEC authorized dealer or visit the official MEC website for additional resources.

By following these safety instructions, you can ensure a safe and enjoyable reloading experience with your MEC Sizemaster Shell Press. Thank you for your attention to safety.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)