

Seater Head 5,60/.223-R15

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 5,60/.223-R15
- Manufacturer: TRIEBEL
- Product no.: EU2017382
- Mfr. No.: 3000054V-05.60-R015
- Diameter (in): 0.223
- Diameter mm: 5,60
- Radius: R15
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-05.60-R015

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instructions](#)

Seater Head Safety Instructions

Introduction

Thank you for choosing the Seater Head 5,60/.223R15 from TRIEBEL. This product is designed for precision bullet seating, ensuring optimal performance and accuracy. To ensure your safety and the effective use of this product, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always use the Seater Head in accordance with the manufacturer's instructions.
- Ensure that the Seater Head is compatible with your reloading equipment.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the Seater Head for any signs of wear or damage before use.
- Report any unsafe product conditions or accidents to the relevant authorities.
- Stay informed about any product recalls by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Hazard Identification:**
 - The Seater Head is made of highquality brass and is precisionmachined. Handle with care to avoid injury.
 - Ensure that the Seater Head is securely attached to the reloading die before use to prevent accidents.
- **Avoiding Hazards:**
 - Do not force the Seater Head if it does not fit properly; this may cause damage or injury.
 - Always wear appropriate safety gear, such as safety glasses and gloves, when using reloading equipment.
 - Avoid using the Seater Head in wet or damp conditions to prevent corrosion and ensure proper functionality.
- **AgeSpecific Warnings:**
 - This product is intended for use by adults only. Keep it away from children and unauthorized users.

Instructions for Installation and Usage

1. Installation:

- Ensure your reloading equipment is clean and free from debris.
- Select the correct Seater Head size using the tool on the manufacturer's website at www.triebelreloading.com.
- Carefully screw the Seater Head into the reloading die until it is secure.
- Doublecheck that the Seater Head is properly aligned and tightened before proceeding.

2. Usage:

- Follow the manufacturer's instructions for operating your reloading equipment.
- Load the cartridge case into the reloading die, ensuring it is seated correctly.
- Gently press down on the handle to seat the bullet, ensuring smooth and even pressure.
- Inspect the cartridge after seating to confirm proper alignment and seating depth.
- If you encounter any resistance or issues, stop immediately and inspect the setup before continuing.

Disposal Instructions

- Dispose of the Seater Head in accordance with local regulations regarding metal disposal.
- Do not dispose of the Seater Head in regular household waste.
- Consider recycling options for metal components to minimize environmental impact.

Contact Information for Further Support

For any questions or concerns regarding the Seater Head, please refer to the manufacturer's website for customer support resources.

Thank you for prioritizing safety and following these instructions for the Seater Head 5,60/.223R15. Proper use and maintenance will ensure a safe and effective reloading experience.