

Seater Head 5,60/.223-R30

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Seater Head 5,60/.223-R30](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017385
- Mfr. No.: 3000054V-05.60-R030
- Diameter (in): 0.223
- Diameter mm: 5,60
- Radius: R30
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-05.60-R030

Table of Contents

- [Startpage](#)
- [Seater Head Safety Instruction Guide](#)
- [About Us](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 5,60/.223R30. This product is designed for precision bullet seating in reloading applications. To ensure your safety and the optimal performance of this product, please read and follow the safety guidelines outlined in this instruction guide.

General Safety Guidelines

- **Product Safety:** Always ensure the safe use of the Seater Head. This product is designed for nonfood applications and must be used according to the instructions provided.
- **Enhanced Recalls:** Stay informed about any recalls related to this product. You can check for updates on the EU's Safety Gate platform.
- **Online Shopping:** If you purchased this product online, ensure that the seller complies with safety requirements similar to those in physical stores.
- **Special Consumer Focus:** Extra care should be taken when this product is used around vulnerable groups, especially children. Keep all reloading equipment out of reach of children.
- **EU Contact Point:** For any safety inquiries, refer to the manufacturer's contact information available on their website.
- **Rapid Alerts:** Be vigilant for any updates regarding unsafe products through the Safety Gate system.

Specific Safety Precautions for Use

- Always wear appropriate personal protective equipment (PPE) such as safety glasses and gloves while using the Seater Head.
- Ensure that the work area is clean and free from obstructions to prevent accidents.
- Do not exceed the manufacturer's recommended specifications for this product.
- Inspect the Seater Head for any signs of damage or wear before each use. Do not use if damaged.
- Keep the Seater Head and all reloading components away from heat sources or open flames.
- Avoid using the Seater Head in damp or wet conditions to prevent electrical hazards if using powered equipment.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading press is turned off and unplugged before installation.
- Carefully remove the old seater head from the die.
- Align the new Seater Head with the die and screw it in securely, ensuring it is tightly fitted.
- Check that the Seater Head is properly aligned before proceeding.

2. Usage:

- Refer to the manufacturer's guidelines for the correct bullet seating depth.
- Insert the cartridge case into the reloading press.
- Slowly lower the ram to seat the bullet into the case, ensuring smooth operation.
- After seating, check the cartridge for proper bullet alignment and depth.
- Always clean the Seater Head after use to maintain precision and prevent residue buildup.

Disposal Instructions

- Dispose of the Seater Head in accordance with local regulations regarding metal recycling.
- Do not dispose of the Seater Head in regular household waste.

- If the product is damaged beyond use, ensure it is recycled or disposed of in a manner that prevents harm to the environment.

Contact Information for Further Support

For any questions or concerns regarding the Seater Head, please refer to the manufacturer's website for support and additional resources.

Thank you for prioritizing safety while using the Seater Head 5,60/.223R30. Your adherence to these guidelines will ensure a safe and effective reloading experience.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk