

Seater Head 6,00/.243-R80A

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 6,00/.243-R80A
- Manufacturer: TRIEBEL
- Product no.: EU2017402
- Mfr. No.: 3000054V-06.00-R080A
- Diameter (in): 0.243
- Diameter mm: 6,00
- Radius: R80
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-06.00-R080A

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 6,00/.243R80A. This product is designed for precision bullet seating, ensuring optimal performance and safety during use. This guide provides essential safety instructions to help you use this product safely and effectively.

General Safety Guidelines

- Always read and understand the instructions before using the Seater Head.
- Ensure that the Seater Head is compatible with your reloading equipment.
- Keep the Seater Head out of reach of children and vulnerable individuals.
- Use the product only for its intended purpose as specified by the manufacturer.
- Inspect the Seater Head regularly for any signs of wear or damage before use.
- Report any unsafe conditions or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including safety glasses and gloves, when handling reloading equipment.
- Ensure that your work area is clean, dry, and welllit to prevent accidents.
- Do not exceed the recommended specifications for bullet seating to avoid potential hazards.
- Avoid using the Seater Head if you are under the influence of drugs or alcohol.
- Be aware of your surroundings and ensure that no one is in close proximity while operating the equipment.

Instructions for Installation and Usage

1. **Compatibility Check:** Ensure that the Seater Head is suitable for use with your original Triebel dies. Refer to the manufacturer's website for compatibility tools.
2. **Installation:**
 - Securely attach the Seater Head to your reloading press according to the manufacturer's instructions.
 - Ensure that all connections are tight and stable to avoid any movement during operation.
3. **Usage:**
 - Before starting, ensure that the work area is clear and that you have all necessary materials at hand.
 - Load the cartridge according to the specifications, ensuring the bullet is properly aligned with the Seater Head.
 - Operate the reloading press slowly and steadily to achieve precise bullet seating.
 - After use, clean the Seater Head to maintain its performance and longevity.
4. **PostUse Check:**
 - Inspect the Seater Head for any signs of damage or excessive wear.
 - Store the Seater Head in a safe and dry location, away from children.

Disposal Instructions

- Dispose of the Seater Head in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Contact local waste management authorities for information on proper disposal methods.

Contact Information for Further Support

For any safety inquiries or further assistance, please refer to the manufacturer's website or customer service resources.