

Seater Head 6,50/.264-R137

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Seater Head 6,50/.264-R137](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017418
- Mfr. No.: 3000054V-06.50-R137
- Diameter (in): 0.264
- Diameter mm: 6,50
- Radius: R13
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-06.50-R137

Table of Contents

- [Startpage](#)
- [Seater Head Safety Instructions](#)
- [About Us](#)

Seater Head Safety Instructions

Introduction

Thank you for choosing the Seater Head 6,50/.264R137. This product is designed for precision bullet seating in reloading applications. To ensure your safety and the effective use of this product, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always ensure that the Seater Head is used in accordance with the manufacturer's guidelines.
- Inspect the Seater Head for any damage before use. Do not use if damaged.
- Keep the Seater Head out of reach of children and vulnerable individuals.
- Use the Seater Head only with compatible dies from Triebel Waffenwerkzeuge.
- Be aware of your surroundings and ensure a safe workspace while reloading.
- Report any unsafe conditions or incidents to the appropriate authorities.

Specific Safety Precautions for Use

- **Hazard Identification:**

- Potential hazards include sharp edges and the risk of injury from improper handling.
- Ensure that the Seater Head is securely attached to the reloading press before use.

- **Avoiding Hazards:**

- Always wear safety glasses when reloading to protect your eyes from debris.
- Keep hands and other body parts away from moving parts during operation.
- Do not exceed the recommended specifications for bullet seating.

- **AgeSpecific Warnings:**

- This product is not intended for use by individuals under the age of 18 without adult supervision.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading press is turned off and unplugged.
- Select the correct Seater Head using the tool available on the manufacturer's website.
- Carefully attach the Seater Head to the appropriate die, ensuring it is secured tightly.

2. Usage:

- Place the cartridge case in the reloading press.
- Adjust the Seater Head to the desired depth for bullet seating.
- Operate the reloading press according to the manufacturer's instructions, ensuring that the Seater Head is functioning correctly.

3. PostUse Care:

- After use, clean the Seater Head to remove any residue.
- Store the Seater Head in a safe and dry location, away from children.

Disposal Instructions

- When the Seater Head is no longer usable or needed, dispose of it in accordance with local regulations.
- Do not dispose of the Seater Head in general waste. Check with local authorities for proper disposal methods for metal products.

Contact Information for Further Support

For any safety inquiries or additional support regarding the Seater Head, please refer to the manufacturer's contact information available on their website.

By following these safety instructions, you can ensure a safe and effective reloading experience. Thank you for your attention to safety and for choosing our product.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk