

Seater Head 6,70/.270-R110

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 6,70/.270-R110
- Manufacturer: TRIEBEL
- Product no.: EU2017426
- Mfr. No.: 3000054V-06.70-R110
- Diameter (in): 0.270
- Diameter mm: 6,70
- Radius: R11
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-06.70-R110

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 6,70/.270R110. This product is designed for precision bullet seating in your reloading process. It is essential to follow safety guidelines to ensure safe and effective use. This guide provides comprehensive safety instructions in compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure that the Seater Head is used only with compatible dies from Triebel Waffenwerkzeuge.
- Always read and understand the instructions provided before using the product.
- Keep the Seater Head out of reach of children and vulnerable individuals.
- Regularly inspect the Seater Head for any signs of damage or wear before each use.
- Follow all local laws and regulations regarding ammunition reloading and handling.

Specific Safety Precautions for Use

- Always wear appropriate personal protective equipment (PPE), such as safety glasses and gloves, when using the Seater Head.
- Do not exceed the recommended specifications for diameter and radius as indicated in the product details.
- Ensure that the workspace is clean and free of clutter to prevent accidents.
- Avoid using the Seater Head if you are under the influence of drugs or alcohol.
- Be cautious of sharp edges and moving parts during operation to prevent injuries.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading press is turned off and unplugged before installation.
- Carefully remove the Seater Head from its packaging.
- Align the Seater Head with the die and securely tighten it in place, ensuring it is properly seated.

2. Usage:

- Verify that the Seater Head is correctly installed and the workspace is prepared.
- Follow the instructions for your specific reloading press to begin the bullet seating process.
- Monitor the seating depth and alignment during use to maintain accuracy.
- If you encounter resistance or difficulty, stop immediately and check for obstructions or misalignment.

3. PostUse:

- After completing your reloading session, carefully remove the Seater Head from the die.
- Clean the Seater Head to remove any debris or residue.
- Store the Seater Head in a safe, dry place away from children and pets.

Disposal Instructions

- Dispose of the Seater Head in accordance with local regulations regarding metal and hazardous waste.
- Do not dispose of the product in regular household waste.
- If the Seater Head is damaged or no longer usable, contact the manufacturer for guidance on proper disposal.

disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the Seater Head, please refer to the manufacturer's website or customer support resources. It is important to have an EU-based contact for safety inquiries and to stay updated on any recall information.

Conclusion

By following these safety instructions and guidelines, you can ensure the safe and effective use of the Seater Head 6,70/.270R110. Always prioritize safety and compliance with local regulations while enjoying your reloading activities.