

Seater Head 7,00/.284-R60

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Seater Head 7,00/.284-R60](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017431
- Mfr. No.: 3000054V-07.00-R060
- Diameter (in): 0.284
- Diameter mm: 7,00
- Radius: R60
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-07.00-R060

Table of Contents

- [Startpage](#)
- [Seater Head Safety Instruction Guide](#)
- [About Us](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 7,00/.284R60 by TRIEBEL. This guide provides essential safety instructions to ensure the safe and effective use of the product. Please read this document carefully before using the Seater Head.

General Safety Guidelines

- Ensure that all nonfood products are used according to their intended purpose.
- Be aware of potential risks associated with the use of this product.
- Regularly check for updates and recalls on the EU's Safety Gate platform.
- Report any unsafe products or accidents to the relevant authorities.
- If you are a vulnerable consumer or if children are present, extra caution should be taken.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including eye protection, when using the Seater Head.
- Keep the Seater Head out of reach of children and unauthorized users.
- Inspect the Seater Head for any signs of damage before use. Do not use if damaged.
- Ensure that the Seater Head is compatible with your reloading dies before installation.
- Follow the manufacturer's guidelines for the correct use of the Seater Head.
- Avoid using excessive force during operation to prevent injury or damage to the product.

Instructions for Installation and Usage

Installation

1. **Check Compatibility:** Verify that the Seater Head is suitable for your original dies from Triebel Waffenwerkzeuge.
2. **Prepare the Workspace:** Ensure that your workspace is clean and welllit.
3. **Secure the Die:** Install the Seater Head into the reloading die following the manufacturer's instructions.
4. **Tighten the Assembly:** Ensure all components are securely tightened to prevent movement during use.

Usage

1. **Load the Cartridge:** Place the cartridge into the reloading press according to the manufacturer's guidelines.
2. **Align the Bullet:** Ensure that the bullet is aligned with the Seater Head to maintain concentricity.
3. **Seating the Bullet:** Gently press the bullet into the cartridge using the reloading press. Avoid using excessive force.
4. **Inspect the Cartridge:** After seating, inspect the cartridge for proper alignment and seating depth.
5. **Store Properly:** After use, store the Seater Head in a safe and dry location.

Disposal Instructions

- Dispose of any damaged or unusable components in accordance with local regulations.
- Do not dispose of the Seater Head in regular household waste. Instead, follow specific disposal guidelines for metal products in your area.

Contact Information for Further Support

For any questions or concerns regarding the safety and usage of the Seater Head, please refer to the

manufacturer's website or contact your local distributor for assistance.

Thank you for prioritizing safety while using the Seater Head 7,00/.284R60. Your adherence to these guidelines helps ensure a safe and effective reloading experience.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk