

Seater Head 7,62/.30-R32

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 7,62/.30-R32
- Manufacturer: TRIEBEL
- Product no.: EU2017442
- Mfr. No.: 3000054V-07.62-R032
- Diameter (in): 0.30
- Diameter mm: 7,62
- Radius: 32
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-07.62-R032

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 7,62/.30R32. This product is designed for precision bullet seating, ensuring optimal accuracy in your reloading process. To ensure safe and effective use, please read this safety instruction guide carefully.

General Safety Guidelines

- Ensure that the Seater Head is used only for its intended purpose.
- Always follow the manufacturer's instructions and guidelines.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the Seater Head for any signs of wear or damage.
- Store the Seater Head in a dry and secure place to prevent accidental damage or misuse.
- Report any unsafe conditions or incidents to the relevant authorities.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including eye protection, when using the Seater Head.
- Do not exceed the recommended specifications for the Seater Head.
- Ensure that the Seater Head is properly secured in your reloading equipment before use.
- Avoid using the Seater Head if it shows signs of damage or wear.
- Do not modify the Seater Head or use it in a manner not specified by the manufacturer.
- Be aware of your surroundings and ensure that others are at a safe distance while using the product.

Instructions for Installation and Usage

1. Installation:

- Carefully read the manufacturer's instructions before installation.
- Ensure that your reloading equipment is compatible with the Seater Head.
- Securely attach the Seater Head to your reloading die according to the manufacturer's guidelines.
- Check that the Seater Head is firmly in place before proceeding.

2. Usage:

- Adjust the Seater Head according to the specifications for the bullet you are using.
- Ensure that the bullet is properly aligned with the Seater Head before seating.
- Apply steady and even pressure when seating the bullet to avoid damaging the cartridge or the bullet.
- Monitor the process closely to ensure accurate bullet seating and cartridge concentricity.

Disposal Instructions

- Dispose of the Seater Head in accordance with local regulations.
- Do not dispose of the product in household waste.
- If the Seater Head is no longer usable, consider recycling materials where possible.

Contact Information for Further Support

For any inquiries or further assistance, please refer to the manufacturer's website or customer service resources available.

By following these guidelines, you can ensure safe and effective use of the Seater Head 7,62/.30R32. Thank you for prioritizing safety in your reloading activities.