

Seater Head 8,15/.321-R15

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 8,15/.321-R15
- Manufacturer: TRIEBEL
- Product no.: EU2017472
- Mfr. No.: 3000054V-08.15-R015
- Diameter (in): 0.321
- Diameter mm: 8,15
- Radius: R15
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-08.15-R015

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 8,15/.321R15 from TRIEBEL. This product is designed for precision bullet seating in rifle reloading applications. To ensure your safety and the proper use of this product, please read this safety instruction guide carefully.

General Safety Guidelines

- Always ensure that the Seater Head is compatible with your reloading die before use.
- Store the Seater Head in a safe, dry place away from children and pets.
- Regularly inspect the Seater Head for any signs of wear or damage before use.
- Use protective eyewear when reloading ammunition to protect against potential hazards.
- Report any unsafe conditions or accidents to the relevant authorities immediately.

Specific Safety Precautions for Use

• Potential Hazards:

- Improper use of the Seater Head can lead to inaccurate bullet seating, which may result in misfires or other malfunctions.
- Injury can occur if the Seater Head is damaged or improperly installed.

• Avoiding Hazards:

- Always follow the manufacturer's guidelines for installation and usage.
- Ensure that the Seater Head is securely attached to the reloading die before use.
- Only use the Seater Head with compatible cartridges as specified by the manufacturer.
- Do not exceed the recommended load limits when reloading ammunition.
- Keep hands and other body parts clear of moving parts during operation.

• AgeSpecific Warnings:

- This product is intended for use by adults only. Keep out of reach of children.
- Ensure that anyone using this product has received proper training in reloading techniques and safety.

Instructions for Installation and Usage

• Installation:

1. Ensure that your reloading press is turned off and unplugged.
2. Remove the existing seater head from your die, if applicable.
3. Carefully attach the Seater Head 8,15/.321R15 to the reloading die, ensuring it is securely fastened.
4. Check for proper alignment and fit before proceeding.

• Usage:

1. Prepare your cartridge case and bullet according to standard reloading practices.
2. Insert the cartridge case into the reloading press.
3. Place the bullet on top of the cartridge case.
4. Slowly and smoothly operate the reloading press to seat the bullet.

5. Inspect the seated bullet for proper alignment and depth before proceeding to the next step.

Disposal Instructions

- Dispose of any damaged or unusable Seater Heads in accordance with local regulations.
- Do not dispose of the Seater Head in regular household waste. Instead, contact your local waste management facility for proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the Seater Head 8,15/.321R15, please refer to the manufacturer's website or contact your local retailer for assistance.

Conclusion

Following these safety instructions will help ensure a safe and effective reloading experience with the Seater Head 8,15/.321R15. Always prioritize safety and comply with the EU General Product Safety Regulation (GPSR) when using this product. Thank you for your attention to these important guidelines. Happy reloading!