

Seater Head 8,20/.323-K9,7

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Seater Head 8,20/.323-K9,7](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017475
- Mfr. No.: 3000054V-08.20-K09.7
- Diameter (in): 0.323
- Diameter mm: 8,20
- Radius: K9,7
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-08.20-K09.7

Table of Contents

- [Startpage](#)
- [Seater Head Safety Instruction Guide](#)
- [About Us](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 8,20/.323K9,7. This product is designed for precise and gentle bullet seating, ensuring optimal performance and accuracy. Please read this safety instruction guide carefully to understand how to use the product safely and effectively.

General Safety Guidelines

- Ensure safe use of the Seater Head by following all instructions provided.
- Be aware of potential risks associated with reloading equipment and ammunition.
- Always use the Seater Head in accordance with the manufacturer's guidelines.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly check for recalls or safety updates related to this product on the EU Safety Gate platform.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including safety glasses and gloves, when handling reloading equipment.
- Ensure that the work area is clean, dry, and well-lit to prevent accidents.
- Do not modify the Seater Head or use it for purposes other than intended.
- Be cautious of sharp edges and moving parts during installation and usage.
- Do not exceed the recommended specifications for the Seater Head, including diameter and radius.
- Always verify the compatibility of the Seater Head with your reloading dies before use.

Instructions for Installation and Usage

1. Preparation

- Gather all necessary tools and materials for reloading.
- Ensure that the Seater Head is compatible with your original Triebel dies.

2. Installation

- Carefully remove the Seater Head from its packaging.
- Inspect the Seater Head for any visible damage or defects before installation.
- Securely attach the Seater Head to the reloading die, following the manufacturer's instructions.
- Ensure that all connections are tight and secure to prevent any movement during use.

3. Usage

- Place the cartridge case in the reloading press.
- Adjust the Seater Head to the desired depth for bullet seating.
- Slowly and steadily operate the reloading press to seat the bullet.
- Check for proper alignment and seating depth after each operation.
- If any issues arise during use, stop immediately and assess the situation.

Disposal Instructions

- Dispose of the Seater Head in accordance with local regulations.
- Do not dispose of the product in general waste if it contains hazardous materials.
- Consider recycling options where available.

Contact Information for Further Support

For safety inquiries or further support regarding the Seater Head, please refer to the manufacturer's website or contact the designated EUbased contact point.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk