

## Seater Head 9,30/.366-K10,5

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website [www.triebel-reloading.com](http://www.triebel-reloading.com). Suitable for original dies from Triebel Waffenwerkzeuge.



### Attributes

- Name: Seater Head 9,30/.366-K10,5
- Manufacturer: TRIEBEL
- Product no.: EU2017504
- Mfr. No.: 3000054V-09.30-K10.5
- Diameter (in): 0.366
- Diameter mm: 9,30
- Radius: K10,5
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-09.30-K10.5

# Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

# Seater Head Safety Instruction Guide

## Introduction

Thank you for choosing the Seater Head 9,30/.366K10,5. This product is designed for precision bullet seating in reloading applications. To ensure your safety and the effective use of this product, please read and follow the safety instructions outlined in this guide.

## General Safety Guidelines

- Always use the Seater Head in accordance with the manufacturer's instructions.
- Ensure the working environment is safe, clean, and free from distractions.
- Keep the Seater Head and all reloading equipment out of reach of children and vulnerable individuals.
- Regularly inspect the Seater Head for any signs of wear or damage before use.
- Report any unsafe conditions or accidents to the appropriate authorities.

## Specific Safety Precautions for Use

### • Hazard Identification:

- Improper use of the Seater Head may lead to personal injury or damage to the equipment.
- Always handle the Seater Head with care to avoid cuts or abrasions from sharp edges.

### • Avoiding Hazards:

- Always wear appropriate safety gear, including safety glasses and gloves, when using the Seater Head.
- Ensure that all components of your reloading setup are securely fastened before use.
- Do not exceed the recommended specifications for the Seater Head, including the diameter and radius.

### • AgeSpecific Warnings:

- This product is not intended for use by individuals under the age of 18. Ensure adult supervision when in use.

## Instructions for Installation and Usage

### • Installation:

1. Ensure the reloading press is turned off and unplugged before installation.
2. Carefully remove the Seater Head from its packaging.
3. Align the Seater Head with the reloading die according to the manufacturer's specifications.
4. Securely fasten the Seater Head onto the die using the appropriate tools.

### • Usage:

1. Set up your reloading bench in a wellventilated area.
2. Prepare your cartridges according to the reloading guidelines.
3. Insert the bullet into the case mouth and position it against the Seater Head.
4. Gradually apply pressure to the handle of the reloading press to seat the bullet gently.
5. Inspect the seated bullet for proper alignment and depth after each operation.

## **Disposal Instructions**

- Dispose of the Seater Head and any associated materials in accordance with local regulations.
- Do not throw the Seater Head in regular household waste if it is damaged or worn out.
- Check with your local waste management authorities for proper disposal methods.

## **Contact Information for Further Support**

For any questions or concerns regarding the Seater Head, please refer to the manufacturer's website at [www.triebelreloading.com](http://www.triebelreloading.com) for further assistance and support.