

Seater Head 9,50/.375-R47

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 9,50/.375-R47
- Manufacturer: TRIEBEL
- Product no.: EU2017516
- Mfr. No.: 3000054V-09.50-R047
- Diameter (in): 0.375
- Diameter mm: 9,50
- Radius: R47
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-09.50-R047

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 9,50/.375R47. This product is designed for precise and gentle bullet seating, ensuring optimal performance in your reloading tasks. To ensure safe and effective use, please read and follow these safety instructions carefully.

General Safety Guidelines

- Ensure that you are familiar with the operation of reloading equipment before using this product.
- Always wear appropriate safety gear, including eye protection and gloves, when handling ammunition components.
- Keep the product out of reach of children and unauthorized users.
- Store the Seater Head in a dry, cool place to prevent damage and ensure longevity.
- Regularly inspect the Seater Head for signs of wear or damage before each use.
- Report any unsafe conditions or incidents to the appropriate authorities.

Specific Safety Precautions for Use

- **Hazard Identification:** Improper use of the Seater Head may lead to inaccurate bullet seating, which can affect the performance of the ammunition. Risk of injury if the Seater Head is used with incompatible dies.
- **Avoiding Hazards:** Always ensure the Seater Head is compatible with your reloading die set. Do not exceed the manufacturer's specifications for bullet seating. Ensure that the Seater Head is securely fastened to the reloading press before use.
- **Age and Audience Specific Warnings:** This product is intended for use by individuals who are knowledgeable in reloading practices. It is not suitable for children.

Instructions for Installation and Usage

• Installation:

1. Ensure that the reloading press is turned off and unplugged.
2. Carefully remove the existing seater head from the die.
3. Align the Seater Head with the die and securely fasten it in place.
4. Check that the Seater Head is properly seated and locked into position.

• Usage:

1. Prepare your cartridge cases and bullets according to your reloading specifications.
2. Adjust the Seater Head to the desired seating depth as per your load data.
3. Place the cartridge case in the press and insert the bullet into the case.
4. Activate the press to seat the bullet gently and evenly.
5. Inspect the seated bullet for proper alignment and seating depth.

- **PostUse:** Clean the Seater Head after use to remove any debris or residue. Store the Seater Head in its protective case to prevent damage.

Disposal Instructions

- Dispose of the Seater Head in accordance with local regulations regarding metal recycling.
- Do not dispose of the Seater Head in regular household waste.
- Ensure that all components are removed from the Seater Head before disposal.

Contact Information for Further Support

For any inquiries or concerns regarding the Seater Head, please refer to the manufacturer's website for support and additional resources. It is important to have access to a reliable point of contact for safety questions or product issues.

By following these safety instructions, you can ensure a safe and effective reloading experience with the Seater Head 9,50/.375R47. Always prioritize safety and consult the manufacturer's resources for further guidance. Thank you for your attention to these important safety measures.