

Seater Head 10,57/.416-R155

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 10,57/.416-R155
- Manufacturer: TRIEBEL
- Product no.: EU2017545
- Mfr. No.: 3000054V-10.57-R155
- Diameter (in): 0.416
- Diameter mm: 10,57
- Radius: R155
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-10.57-R155

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 10,57/.416R155. This product is designed for precision bullet seating and is manufactured from highquality brass. Please read this safety instruction guide carefully to ensure safe and effective use of the product. Adhering to these guidelines will help you avoid potential hazards and ensure optimal performance.

General Safety Guidelines

- Always read the product instructions before use.
- Ensure that the product is used only for its intended purpose.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly check for any signs of wear or damage before use.
- Report any unsafe conditions or accidents to the appropriate authorities.
- Stay informed about product recalls through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Hazard Identification:**

- Improper use may lead to injury or damage to the firearm.
- Ensure that the Seater Head is compatible with your reloading dies.

- **Avoiding Hazards:**

- Use the Seater Head only with original dies from Triebel Waffenwerkzeuge.
- Do not exceed the specified dimensions and tolerances.
- Always wear appropriate safety gear, including eye protection, when reloading ammunition.

- **Age Restrictions:**

- This product is not intended for use by individuals under 18 years of age without adult supervision.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading press is clean and free of obstructions.
- Select the correct Seater Head using the tool on the manufacturer's website: www.triebelreloading.com.
- Securely attach the Seater Head to your reloading die, following the manufacturer's instructions.

2. Usage:

- Check the alignment of the Seater Head before starting the reloading process.
- Load the bullet into the case mouth and ensure it is seated properly.
- Operate the reloading press smoothly to avoid jamming or misalignment.
- After use, clean the Seater Head to maintain its precision and longevity.

Disposal Instructions

- Dispose of the Seater Head in accordance with local regulations for metal products.
- Do not dispose of the product in regular household waste.
- Consider recycling options to minimize environmental impact.

Contact Information for Further Support

For any questions or concerns regarding the Seater Head, please refer to the manufacturer's website or contact the appropriate EUbased support services for assistance.

Thank you for your attention to these safety guidelines. Your safety is our priority, and we wish you a successful and safe reloading experience.