

Seater Head 11,48/.452-R45

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 11,48/.452-R45
- Manufacturer: TRIEBEL
- Product no.: EU2017553
- Mfr. No.: 3000054V-11.48-R045
- Diameter (in): 0.452
- Diameter mm: 11,48
- Radius: R45
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-11.48-R045

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 11,48/.452R45, a precisionengineered product designed for optimal bullet seating. This guide provides essential safety instructions to ensure safe and effective use of the product in compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Always read and understand the safety instructions before using the product.
- Ensure that the product is used only for its intended purpose.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of wear or damage before each use.
- Follow all local laws and regulations regarding reloading and ammunition.

Specific Safety Precautions for Use

- **Hazard Identification:**

- The Seater Head can produce sharp edges; handle with care to avoid cuts.
- Ensure that the product is securely attached to the reloading press to prevent accidents.
- Use appropriate personal protective equipment (PPE), such as safety glasses and gloves, during operation.

- **Avoiding Hazards:**

- Do not exceed the recommended specifications for the Seater Head.
- Ensure that all components are compatible and properly installed.
- Avoid using the product if you are under the influence of alcohol or drugs.
- Keep the working area clean and free from obstructions to prevent tripping hazards.

Instructions for Installation and Usage

- **Installation:**

1. Ensure that the reloading press is turned off and unplugged.
2. Select the correct Seater Head using the tool available on the manufacturer's website.
3. Securely attach the Seater Head to the reloading press according to the manufacturer's instructions.
4. Doublecheck all connections to ensure they are tight and secure.

- **Usage:**

1. Prepare your workspace by ensuring it is clean and welllit.
2. Load the cartridge case into the reloading press.
3. Insert the bullet into the case and align it with the Seater Head.
4. Gradually apply pressure to the reloading press handle to seat the bullet gently.
5. Inspect the cartridge after seating to ensure proper alignment and depth.
6. Repeat the process for each cartridge, maintaining focus and care throughout.

Disposal Instructions

- Dispose of any defective or damaged products in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Contact your local waste management facility for proper disposal methods.

Contact Information for Further Support

For any safety inquiries or further assistance, please refer to the manufacturer's website or your local distributor. Ensure you have the product details ready for efficient support.

By following these safety instructions, you can ensure a safe and effective reloading experience with the Seater Head 11,48/.452R45. Thank you for your attention to safety.