

Seater Head 11,60/.458-R8

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 11,60/.458-R8
- Manufacturer: TRIEBEL
- Product no.: EU2017554
- Mfr. No.: 3000054V-11.60-R008
- Diameter (in): 0.458
- Diameter mm: 11,60
- Radius: R8
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-11.60-R008

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 11,60/.458R8. This guide provides essential safety instructions to ensure the safe use and handling of the product. Please read this document carefully before use to understand the safety precautions, installation instructions, and disposal methods.

General Safety Guidelines

- Ensure that the Seater Head is used only with compatible reloading dies from Triebel Waffenwerkzeuge.
- Always wear appropriate personal protective equipment (PPE) such as safety glasses and gloves when handling reloading components.
- Keep the Seater Head and all reloading materials out of reach of children and unauthorized persons.
- Inspect the Seater Head before each use for any signs of wear or damage. Do not use if damaged.
- Follow all local laws and regulations regarding reloading and ammunition manufacturing.

Specific Safety Precautions for Use

- Use the Seater Head only for its intended purpose, which is to seat bullets in cartridges.
- Ensure that the work area is clean and free of any obstructions or hazards.
- Never exceed the recommended load specifications for the cartridges you are reloading.
- Be cautious of the potential for lead exposure when handling bullets. Use proper ventilation and wash hands thoroughly after handling.
- In case of an accident or injury, seek medical attention immediately.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools and materials, including the Seater Head, reloading die, bullet, and cartridge case.
- Ensure your work area is clean and welllit.

2. Installation:

- Remove the existing seater head from your reloading die, if applicable.
- Carefully screw the Seater Head into the reloading die until it is securely fastened.
- Adjust the Seater Head to the desired depth for bullet seating, following the manufacturer's specifications.

3. Usage:

- Place the cartridge case in the reloading press.
- Insert the bullet into the cartridge case.
- Activate the reloading press to seat the bullet using the Seater Head.
- Inspect the seated bullet for proper alignment and depth.

4. PostUsage:

- Clean the Seater Head and surrounding area after use to prevent contamination and ensure longevity.

Disposal Instructions

- Dispose of any damaged or worn Seater Head in accordance with local waste disposal regulations.
- Recycle materials whenever possible, following local guidelines for metal recycling.

Contact Information for Further Support

For additional support or inquiries regarding the Seater Head, please refer to the manufacturer's website at www.tribelreloading.com. You can find further resources, including safety updates and product recalls.

Conclusion

By following these safety instructions, you can ensure a safe and effective reloading experience with the Seater Head 11,60/.458R8. Always prioritize safety and stay informed about best practices in reloading. Thank you for your attention to these important guidelines.