

Seater Head 12,90/.500-R24

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 12,90/.500-R24
- Manufacturer: TRIEBEL
- Product no.: EU2017564
- Mfr. No.: 3000054V-12.90-R024
- Diameter (in): 0.505
- Diameter mm: 12,90
- Radius: R24
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-12.90-R024

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 12,90/.500R24. This guide provides essential safety instructions and usage information to ensure your safe and effective use of this product. Please read this guide carefully before use.

General Safety Guidelines

- Ensure that the Seater Head is used only with original dies from Triebel Waffenwerkzeuge.
- Always inspect the Seater Head for any signs of damage or wear before use.
- Keep the Seater Head out of reach of children and unauthorized users.
- Use the product only for its intended purpose as specified in this guide.
- Report any unsafe products or incidents to the relevant authorities.

Specific Safety Precautions for Use

- **Hazard Identification:**

- Potential risk of injury from improper handling or misuse.
- Risk of decreased accuracy if the Seater Head is not properly aligned.

- **Avoiding Hazards:**

- Always ensure the Seater Head is securely attached to the reloading press before use.
- Do not force the Seater Head into place; it should fit securely without excessive pressure.
- Wear appropriate safety gear, such as safety glasses, while using the Seater Head.
- Do not attempt to modify or alter the Seater Head in any way.

- **AgeSpecific Warnings:**

- This product is not intended for use by individuals under the age of 18. Ensure that only qualified adults handle the Seater Head.

Instructions for Installation and Usage

- **Installation:**

1. Ensure the reloading press is turned off and unplugged.
2. Select the appropriate Seater Head for your cartridge as per the manufacturer's guidelines.
3. Securely attach the Seater Head to the reloading press, ensuring it is aligned correctly.
4. Doublecheck that all connections are tight and secure before proceeding.

- **Usage:**

1. Prepare the cartridge case and bullet as per standard reloading procedures.
2. Carefully place the bullet into the cartridge case.
3. Engage the reloading press to seat the bullet using the Seater Head.
4. Monitor the process to ensure that the bullet is seated correctly and that there are no obstructions.
5. After use, clean the Seater Head to maintain its precision and functionality.

Disposal Instructions

- Dispose of the Seater Head in accordance with local regulations for metal recycling or hazardous waste.
- Do not dispose of the Seater Head in regular household waste.
- Ensure that any used components are also disposed of safely and responsibly.

Contact Information for Further Support

For any safety inquiries or additional support regarding the Seater Head, please refer to the manufacturer's official website or contact your local distributor.

Thank you for your attention to these safety guidelines. Your safety and satisfaction are our priorities.