

Seater Head 12,90/.500-R148

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Seater Head 12,90/.500-R148](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017569
- Mfr. No.: 3000054V-12.90-R148
- Diameter (in): 0.505
- Diameter mm: 12,90
- Radius: R148
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-12.90-R148

Table of Contents

- [Startpage](#)
- [Seater Head Safety Instruction Guide](#)
- [About Us](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 12,90/.500R148. This product is designed to provide precise and gentle bullet seating, enhancing your reloading experience. It is essential to follow the safety instructions outlined in this guide to ensure safe and effective use.

General Safety Guidelines

- Always use the Seater Head in accordance with the manufacturer's instructions.
- Ensure that the product is compatible with your reloading equipment.
- Regularly inspect the Seater Head for any signs of wear or damage before use.
- Keep the Seater Head out of reach of children and vulnerable individuals.
- Report any unsafe products or accidents to the appropriate authorities.
- Stay informed about product recalls and safety updates via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Hazard Identification:**

- Improper use may lead to misalignment, resulting in inaccurate bullet seating.
- Risk of injury if the product is damaged or used incorrectly.

- **Avoiding Hazards:**

- Always ensure the Seater Head is properly installed before use.
- Do not exceed the recommended specifications for your reloading setup.
- Use appropriate personal protective equipment (PPE), such as safety glasses and gloves, when handling ammunition components.

- **Age and Audience Warnings:**

- This product is intended for adult users only. Keep out of reach of children.

Instructions for Installation and Usage

- **Installation:**

1. Ensure that your reloading press is clean and free from debris.
2. Select the appropriate Seater Head for your specific die set.
3. Securely attach the Seater Head to your reloading press according to the manufacturer's instructions.

- **Usage:**

1. Prepare your cases and bullets as per standard reloading practices.
2. Insert the bullet into the case mouth.
3. Adjust the Seater Head to ensure proper bullet alignment.
4. Operate the reloading press to seat the bullet gently and precisely.
5. Inspect the completed cartridge for proper seating depth and alignment.

Disposal Instructions

- Dispose of the Seater Head responsibly when it reaches the end of its usable life.
- Follow local regulations for the disposal of metal products.
- Do not dispose of the Seater Head in regular household waste.

Contact Information for Further Support

For any questions or concerns regarding the Seater Head, please refer to the manufacturer's website for detailed support and guidance.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk