

Seater Head 14,83/.577-R16

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Seater Head 14,83/.577-R16
- Manufacturer: TRIEBEL
- Product no.: EU2017571
- Mfr. No.: 3000054V-14.83-R016
- Diameter (in): 0.577
- Diameter mm: 14,83
- Radius: R16
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-14.83-R016

Table of Contents

- [Startpage](#)
- [English: Seater Head Safety Instruction Guide](#)

Seater Head Safety Instruction Guide

Introduction

Thank you for choosing the Seater Head 14,83/.577R16 by TRIEBEL. This guide provides essential safety instructions to ensure the proper and safe use of the product. It is important to follow these guidelines to minimize risks and ensure optimal performance.

General Safety Guidelines

- Always use the Seater Head in accordance with the manufacturer's instructions.
- Ensure that the product is used only for its intended purpose.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the Seater Head for any signs of wear or damage before use.
- Report any unsafe conditions or incidents to the appropriate authorities.
- Stay informed about product recalls by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- **Hazard Identification:**

- Improper use of the Seater Head may lead to inaccurate bullet seating, which can affect firearm performance.
- Use of damaged or worn components can result in malfunctions or accidents.

- **Avoiding Hazards:**

- Always ensure that the Seater Head is securely attached to the reloading die before use.
- Do not exceed the specified diameter and radius limits when using the Seater Head.
- Wear appropriate safety gear, such as safety glasses, when reloading ammunition.
- Handle all components with care to avoid injury.

- **AudienceSpecific Warnings:**

- This product is not intended for use by individuals under the age of 18.
- Ensure that inexperienced users are supervised by knowledgeable adults when using the Seater Head.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading press is clean and free of debris.
- Select the correct Seater Head using the tool available on the manufacturer's website www.tribelreloading.com.
- Carefully screw the Seater Head into the reloading die until it is secure.
- Check the alignment of the Seater Head to ensure it is properly positioned.

2. Usage:

- Prepare your brass cartridges according to standard reloading procedures.
- Insert the bullet into the case mouth and position it against the Seater Head.
- Operate the reloading press smoothly and steadily to seat the bullet.
- Inspect each cartridge after seating to ensure proper bullet depth and alignment.

- Store the Seater Head in a safe place when not in use to prevent damage.

Disposal Instructions

- Dispose of the Seater Head and any associated components in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Contact your local waste management facility for guidance on proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the Seater Head, please consult the manufacturer's website or contact your local dealer for assistance. Always ensure that you have the latest information regarding product safety and usage.

By following these guidelines, you can ensure the safe and effective use of the Seater Head 14,83/.577R16. Thank you for prioritizing safety in your reloading practices.