

Seater Head 14,83/.577-R75

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

Seater head made from high-quality brass, precision-machined in a single setup on modern CNC machines – for precise and gentle bullet seating. Profile-matched design ensures optimal axial bullet alignment, improving cartridge concentricity and overall accuracy. Select the correct seater head using the tool on the manufacturer's website www.triebel-reloading.com. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: [Seater Head 14,83/.577-R75](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2017573
- Mfr. No.: 3000054V-14.83-R075
- Diameter (in): 0.577
- Diameter mm: 14,83
- Radius: R75
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm
- EAN/UPC: 3000054V-14.83-R075

Table of Contents

- [Startpage](#)
- [Seater Head Safety Instructions](#)
- [About Us](#)

Seater Head Safety Instructions

Introduction

Thank you for choosing the Seater Head designed for precision bullet seating. This guide provides essential safety instructions to ensure the safe use of the product in compliance with the EU General Product Safety Regulation (GPSR). Please read this manual carefully before installation and use.

General Safety Guidelines

- Always handle the Seater Head with care to prevent personal injury.
- Ensure that the product is used only for its intended purpose.
- Keep the Seater Head out of reach of children and vulnerable individuals.
- Regularly inspect the Seater Head for any signs of damage or wear before use.
- If you notice any defects or irregularities, do not use the product and contact the manufacturer for support.

Specific Safety Precautions for Use

- Use appropriate personal protective equipment (PPE) such as safety glasses and gloves when handling the Seater Head.
- Ensure that the Seater Head is securely attached to the reloading die before use.
- Follow the manufacturer's instructions for bullet seating to avoid accidents.
- Do not exceed the recommended specifications for bullet seating as specified by the manufacturer.
- Be aware of the potential for accidental discharge during the reloading process. Always point the firearm in a safe direction.

Instructions for Installation and Usage

1. Installation:

- Ensure that your workspace is clean and free from distractions.
- Select the correct Seater Head for your reloading die as per the manufacturer's website.
- Carefully attach the Seater Head to the reloading die, ensuring a secure fit.

2. Usage:

- Place the cartridge case in the reloading press.
- Insert the bullet into the case mouth.
- Engage the reloading press to begin the seating process.
- Monitor the alignment of the bullet as it seats to ensure proper concentricity.
- After seating, visually inspect the cartridge for proper bullet alignment.

Disposal Instructions

- Dispose of the Seater Head responsibly according to local regulations.
- Do not dispose of the Seater Head in regular household waste.
- Check with local waste disposal facilities for appropriate recycling or disposal options for metal products.

Contact Information for Further Support

For any inquiries related to product safety or support, please refer to the manufacturer's website or contact your local distributor.

Thank you for your attention to these safety instructions. Your safety is our priority.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk