

Bullet Feeder | Gen2 (Frankford Arsenal, .223 Rem)

Upgrade your production with our new and improved electronic bullet feeding system, specifically engineered for the Frankford Arsenal X-10 progressive reloading press. Featuring a rugged, injection-molded design, this system integrates smart automation with industrial-grade reliability. With advanced optical sensors, automated jam clearance, and a high-capacity collator holding up to 250 rounds of 9mm, it is designed to maximize your hourly output and eliminate reloading bottlenecks.



Attributes

- Name: Armanov Bullet Feeder | Gen2 (Frankford Arsenal, .223 Rem)
- Manufacturer: ARMANOV
- Product no.: EU2018243
- Mfr. No.: ABFG2FA223
- Colour: Black
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- [Startpage](#)
- [English: Armanov Bullet Feeder | Gen2 Safety Instructions](#)

Armanov Bullet Feeder | Gen2 Safety Instructions

Introduction

Thank you for choosing the Armanov Bullet Feeder | Gen2. This product is designed to enhance your reloading experience with advanced features and robust construction. To ensure safe and effective use of this equipment, please carefully read and follow these safety instructions.

General Safety Guidelines

- Always operate the bullet feeder according to the manufacturer's instructions.
- Keep the bullet feeder out of reach of children and vulnerable individuals.
- Regularly inspect the bullet feeder for any signs of damage or wear.
- Do not use the product if you notice any defects or malfunctions.
- Ensure that the bullet feeder is used in a wellventilated area.
- Follow all local laws and regulations regarding the use of reloading equipment.
- Report any unsafe conditions or incidents to the appropriate authorities.

Specific Safety Precautions for Use

• Electrical Safety:

- Ensure that the power supply matches the specifications provided in the user manual.
- Avoid using the bullet feeder in wet or damp conditions.
- Do not overload electrical outlets or use damaged cords.

• Mechanical Safety:

- Keep hands and clothing away from moving parts during operation.
- Do not attempt to disassemble or modify the bullet feeder.
- Use only compatible bullets and materials as specified by the manufacturer.

• Operational Safety:

- Do not leave the bullet feeder unattended while in operation.
- Be aware of your surroundings and ensure that bystanders are at a safe distance.
- In case of a jam, follow the automated jam clearance instructions carefully.

Instructions for Installation and Usage

1. Installation:

- Unpack the bullet feeder and inspect all components for damage.
- Place the bullet feeder on a stable, flat surface.
- Connect the power supply to the bullet feeder, ensuring a secure fit.
- Load the collator with up to 250 rounds of 9mm bullets, following the manufacturer's guidelines.

2. Usage:

- Turn on the bullet feeder using the power switch.
- Monitor the optical sensors to ensure proper operation.
- If a jam occurs, follow the automated clearance process as outlined in the user manual.
- Regularly check the collator for bullet levels and refill as necessary.

3. Maintenance:

- Clean the bullet feeder regularly to prevent debris buildup.
- Check all electrical connections and mechanical parts for wear and tear.
- Store the bullet feeder in a dry and secure location when not in use.

Disposal Instructions

- When disposing of the bullet feeder, follow local regulations for electronic waste.
- Remove any batteries or power sources before disposal.
- Consider recycling components where possible to minimize environmental impact.

Contact Information for Further Support

For any questions or concerns regarding the Armanov Bullet Feeder | Gen2, please refer to the user manual or contact the manufacturer directly for assistance.