

DILLON 650 TOOLHEAD - ZERO PLAY - FREE FLOAT READY - Ejector Wire for Dillon RL550 - 13925

Keep your Dillon Precision reloading press operating at peak performance. This high-quality spare part is built to mirror original factory specifications, ensuring absolute compatibility, a perfect fit, and the seamless functionality required for smooth, error-free reloading sessions.



Attributes

- Name: Ejector Wire for Dillon RL550 - 13925
- Manufacturer: ARMANOV
- Product no.: EU2018347
- Mfr. No.: EJWIRE550
- Colour: Silver
- Material: Aluminum
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- [Startpage](#)
- [English: Safety Instruction Guide for ARMANOV DILLON 650 TOOLHEAD ZERO PLAY FREE FLOAT READY Ejector Wire for Dillon RL550](#)

Safety Instruction Guide for ARMANOV DILLON 650 TOOLHEAD ZERO PLAY FREE FLOAT READY Ejector Wire for Dillon RL550

Introduction

Thank you for choosing the ARMANOV DILLON 650 TOOLHEAD. This guide provides essential safety instructions to ensure the safe and effective use of the product. Please read this document carefully before installation and usage to avoid any hazards.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose as specified in this guide.
- Keep the product out of reach of children and vulnerable individuals to prevent accidents.
- Regularly inspect the toolhead for signs of wear or damage. Do not use if any defects are found.
- Always follow the manufacturer's instructions for installation and usage.
- Report any unsafe conditions or incidents to the relevant authorities.

Specific Safety Precautions for Use

- Always wear appropriate protective gear, such as safety glasses and gloves, when operating the reloading press.
- Ensure that the work area is clean and free from any obstructions that may cause accidents.
- Do not exceed the recommended load limits for the Dillon RL550 reloading press.
- Avoid distractions while operating the equipment to maintain focus and prevent errors.
- If you experience any unusual noise or performance issues, stop using the toolhead immediately and check for problems.

Instructions for Installation and Usage

1. Installation

- Ensure the Dillon RL550 reloading press is turned off and unplugged before installation.
- Remove the existing toolhead if applicable, following the manufacturer's instructions.
- Align the ARMANOV DILLON 650 TOOLHEAD with the press and securely attach it.
- Confirm that all connections are tight and there are no loose parts.

2. Usage

- Before starting a reloading session, doublecheck that all components are correctly installed.
- Load the press according to the manufacturer's guidelines, ensuring that the toolhead is functioning properly.
- Monitor the reloading process closely for any signs of malfunction or irregularities.
- After use, clean the toolhead and surrounding area to maintain optimal performance.

Disposal Instructions

- Dispose of the product in accordance with local regulations regarding electronic waste and materials.
- Do not dispose of the toolhead in regular household waste.
- Consider recycling options available in your area to minimize environmental impact.

Contact Information for Further Support

For any questions or concerns regarding the product, please refer to the manufacturer's customer support resources.

Thank you for your attention to these safety guidelines. By following these instructions, you can ensure a safe and efficient reloading experience with your ARMANOV DILLON 650 TOOLHEAD.