

Mini Bullet Feeder (.45ACP)

A cost-effective solution for enhancing efficiency and safety. The Armanov Mini Bullet Feeder automates the bullet placement process, completely eliminating the need to insert your fingers between the die and the case. While the full-scale Armanov Bullet Feeder Gen2 is an incredible high-volume upgrade, this Mini version serves as the perfect entry-level solution for those new to reloading or working with lower production volumes.



Attributes

- Name: Armanov Mini Bullet Feeder (.45ACP)
- Manufacturer: ARMANOV
- Product no.: EU2018396
- Mfr. No.: MINIBF45
- Colour: Blue
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- [Startpage](#)
- [English: Armanov Mini Bullet Feeder Safety Instruction Guide](#)

Armanov Mini Bullet Feeder Safety Instruction Guide

Introduction

Thank you for choosing the Armanov Mini Bullet Feeder (.45ACP). This product is designed to enhance your reloading efficiency and safety. This guide provides important safety instructions, general guidelines, and operational procedures to ensure a safe and effective user experience.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose.
- Always read and follow the instructions provided in this manual.
- Keep the Mini Bullet Feeder out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of wear or damage before use.
- Report any unsafe conditions or incidents to the appropriate authorities.
- Stay informed about product recalls and safety updates through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Only use the Mini Bullet Feeder with compatible bullet types and calibers.
- Do not attempt to modify or repair the product yourself. Seek professional assistance for repairs.
- Ensure that your workspace is clean and free from distractions while using the feeder.
- Always wear appropriate personal protective equipment (PPE), including safety glasses and gloves, when reloading.
- Do not place your fingers or any objects between the die and the case during operation.
- Ensure that the feeder is securely attached to your reloading press before use.
- Follow all local laws and regulations regarding ammunition reloading.

Instructions for Installation and Usage

Installation

1. Unbox the Armanov Mini Bullet Feeder and check for all components.
2. Identify the mounting area on your reloading press.
3. Align the feeder with the mounting holes and secure it using the provided screws.
4. Ensure that the feeder is stable and does not wobble during operation.

Usage

1. Prepare your workspace by organizing all necessary materials and tools.
2. Load the bullets into the feeder's hopper, ensuring they are properly oriented.
3. Adjust the feeder settings according to the type of bullets being used.
4. Begin the reloading process by operating the reloading press while the feeder automatically places the bullets into the cases.
5. Monitor the operation closely to ensure that bullets are being fed correctly and safely.
6. If any jams or malfunctions occur, stop using the feeder immediately and troubleshoot the issue.

Disposal Instructions

- Dispose of the Armanov Mini Bullet Feeder in accordance with local waste management regulations.
- If the product is no longer usable, ensure that it is disposed of safely to prevent any potential hazards.
- Recycle components where possible, following local recycling guidelines.

Contact Information for Further Support

For any questions or concerns regarding the Armanov Mini Bullet Feeder, please refer to the contact information provided with your product or on the official website.

Stay safe and enjoy your reloading experience with the Armanov Mini Bullet Feeder!